



STAINLESS FLOOR & TUNNEL SHIELD RELEASE LINER REMOVAL INSTRUCTIONS

To remove backing release liner on Stainless Floor & Tunnel shield, use a razor blade or Xacto knife to pick the edge of the perforated backing. Grab the backing and easily pull backing liner off. The backing is perforated to make this an easier process.

