

INSTALLATION INSTRUCTIONS Polaris RZR



- 1. Remove seats per factory directions and set aside.
- 2. Remove the three Torx bolts on the center console. One in the front and one on each side. See fig 1



3. Remove all the push pins by popping the center of the pin up and removing them. See Fig 2





4. Pull the shifter boot loose from the console. It will stay on the shifter. Fig 3

5. SAFETY! Make sure to block the wheels and move the shifter to the neutral position.

6. Pop the seat belt rubber boots out

of the console. Fig 4



Figure 3



Figure 4

7. Remove each of the two seat belt bolts holding the end of the seat belts in place. Fig 5



Figure 5

8. Unplug the wire for the driver side seat belt. Fig 6



9. Remove the console.

10. Wash and clean the underside of the console. It must be free of dirt and debris.

11. This kit contains 8 heat shields and a roll of seaming tape. Lay out the part as see in Fig 7

12. Starting with part number one, pre-fit to the console. Fig $\ensuremath{\mathsf{8}}$

13. Bend the shield to fit the contour of the underside of the console. Then peel a portion of the release liner away at the end with the half circle cut out. Place the shield in place making sure to align properly. Press firmly down and slowly peel the backing away and pressing the shield into place as you go. Fig 9

14. Trim the plastic knub off the bottom of the cup holders. Fig 10. Wrap the cup holder shield around the holder and fold over the top. Peel a portion of the release liner and reinstall the shield pulling the liner away as you press in into place. Repeat for the second holder. Fig 11



Figure 7



Figure 8

15. Repeat this process for the remaining parts until the underside of the console is covered.

16. Take the seeming tape and go over each seam as necessary.

17. Replace the console in reverse order as you removed it.



Figure 9



Figure 10



Figure 11