

## INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

**DESCRIPTION:** C5 & C6 Corvette Tunnel Shield, 4 Piece Side Shields Kit and Complete 5 Piece kits

**KIT CONTENTS:**

- Tunnel Shield Plate Shield (1 Piece 050525, 050526, 050530, 050532)  
Tunnel Side Shields (4 Pieces 050529, 050531, 050530, 050532)
- Application roller (5 piece kit only 050530, 050532)
  - Instructions

**TOOLS NEEDED:**

- Application roller  
Cleaner & Degreaser  
Rags/Towels  
Tools for midpipe removal

**SAFETY:**

- Safety glasses  
Gloves

**NOTE OF CAUTION:** Wear eye and hand protection when installing all materials. Use cleaners or degreasers in a well ventilated area

**OVERVIEW:** Corvettes are notorious for hot trans tunnels in the interior. These shields eliminate the heat and make driving cool and comfortable.

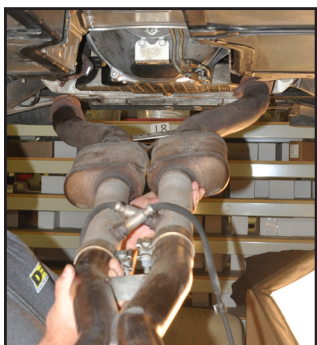


Fig 1

STEP 1. Lift vehicle and support per factory service manual.

STEP 2. Remove exhaust center section per factory service manual. **Fig 1**



Fig 2

STEP 3. Once exhaust is removed, clean the tunnel area top (and sides if installing the side shields), to remove dirt and grease. This area must be clean for the adhesive to stick. **Fig 2**