

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 50299
1988-1998 C/K Truck Roof Insulation Kit

KIT CONTENTS:

- 2 precut sections of D-Mat insulation material
- 1 roll of adhesive transfer tape
- Instructions

TOOLS NEEDED:


Cleaner/Degreaser
Scissor / Utility knife

SAFETY:

Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Edges of damping material may be sharp. Use caution when installing damping material

OVERVIEW: This kit controls noise and vibration on roofs of 1988 to 1998 Chevy GMC C/K trucks.

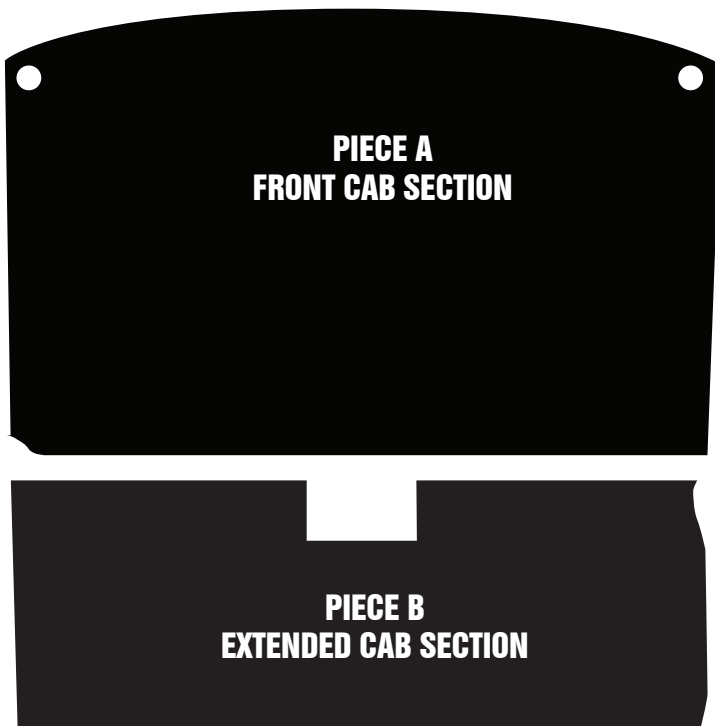

Preparation

STEP 1. Remove your headliner & any overhead console according to the manufacturer's instructions.

STEP 2. Once the roof is exposed, clean all debris, grease, and rust from the area. Now would also be a good time to coat any areas using Boom Mat Prep spray (50491) to seal and convert any rust and corrosion.

Installation

STEP 1. Using Figure 2 as a guide, layout the pieces of Insulation Material in those locations.

STEP 2. Now that you are satisfied with the fit you can attach the D-Mat Insulation to the front cab roof section. Cut small stripes of the Transfer Tape and apply to the roof in various areas. The location is not important as long as you use enough to secure the D-Mat. Remove the tape backing and press the D-Mat back in place, pushing in the tape areas. Do this for all the areas around the cab roof as needed. Figure 3



FIG. 2
 Install insulation material as shown in image. Piece a is for the front cab section with the rounded edge and holes going toward the windshield. Piece B is for the extended cab section with the notched out area going around the dome light.



FIG. 3
 Install strips of adhesive Transfer Tape to the floor pan where needed to hold Under Carpet Lite insulation in place. The placement is not critical. Just apply to areas to hold insulation in place. Once applied, peel back liner of tape and press Under Carpet Lite Insulation in place.

STEP 3. Reinstall your headliner & any overhead console according to the manufacturer's instructions.