



## PRODUCT INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified Powersports technician.

**DESCRIPTION:** Muffler Heat Shield kit

**OVERVIEW:** The DEI Golf Cart Muffler Cover reduces radiant heat produced by the muffler resulting in a cooler more comfortable ride.

**PART NUMBER:** 902480

**APPLICATION(s):** Yamaha Gasoline Golf Carts 2015+. For use on all models using JW8-E4710-01-00 muffler.

**KIT CONTENTS:**

700411 Extreme Heat Barrier	QTY 1
010217B Stainless Tie 12mm	QTY 2
010220 DEI Tie Tool	QTY 1

**TOOLS NEEDED:** ¼" drive wrench, side cutters

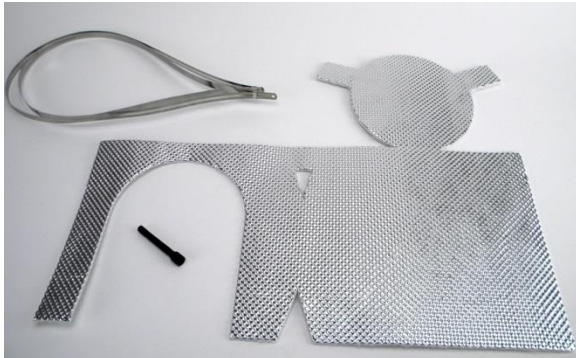


Fig. 1

1. **⚠ CAUTION:** Make sure the engine and muffler are cool before attempting installation.
2. Open the seat to gain access to the engine compartment. **(Fig. 1)**
3. Wrap the shield around the muffler with the seam facing the belt drive. **(Fig 2)**
4. Fold down the top, tucking in the flaps inside the shield. **(Fig. 3)**
5. Wrap 2 supplied stainless ties horizontally. **(Fig. 4)**
6. Tighten ratchet ties with supplied DEI Locking Tie Tool **(Fig. 5)**
7. Clip off excess tie using side cutters and fold sharp edge over.



Fig. 2



Fig. 3



Fig. 4

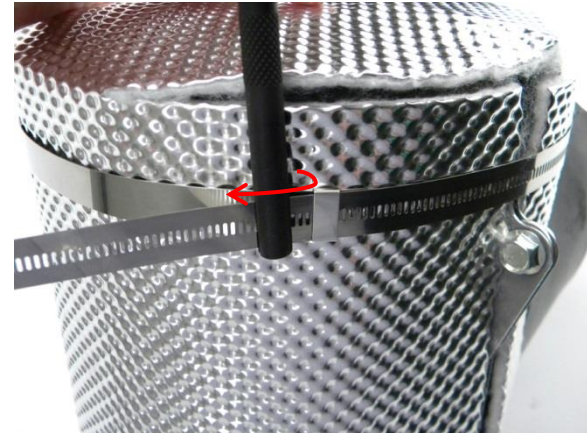


Fig. 5