



INNOVATIVE  
**HEAT & SOUND  
CONTROL**  
SOLUTIONS

# INSTALLATION INSTRUCTIONS

## EXHAUST SLEEVE TITANIUM

#901155

#10022

**INSTALLATION QUESTIONS? CONTACT DEI AT 800-264-9472  
OR VIA EMAIL AT TECH@DESIGNENGINEERING.COM**

**NOTE OF CAUTION: Wear eye and hand protection when installing all materials.**

### PARTS CHECKLIST

- QTY 1 - Exhaust Sleeve Titanium 2"x 5'
- QTY 2 - Stainless Tie 9mm
- QTY 2 - Stainless Tie 12mm
- QTY 1 - Tie Tool

### NOTES

### TOOLS

1/4" driver, side cutters, and scissors

**NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Edges of locking ties may be sharp. Use caution when installing them.**

**OVERVIEW:** A great looking alternative to traditional wrap, this sleeve kit will keep you cool and give you a clean, classy look.

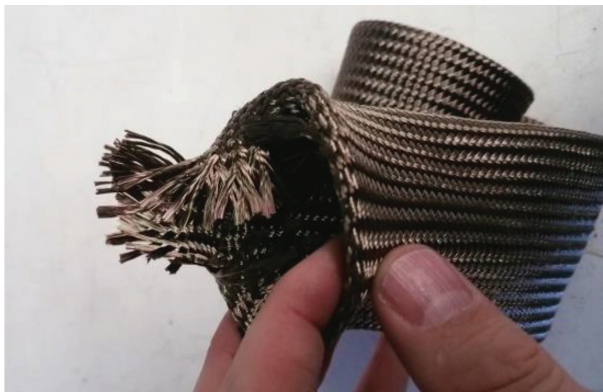


FIG 1



FIG 2

STEP 1. Remove exhaust from bike.

STEP 2. Clean exhaust thoroughly

STEP 3. Fold the loose ends of the sleeve inward and slide onto the exhaust pipe. Compress the sleeve (like an accordion) to expand the diameter. This makes it easier to slide onto the exhaust. Fig. 1

STEP 4. Secure one end of the sleeve with supplied stainless tie. Fig. 2

STEP 5. Pull the end of the sleeve, tightening around the exhaust. Work any extra slack from the sleeve.

STEP 6. Make a mark on the sleeve at end of the exhaust, leaving a little extra that can be tucked in.

STEP 7. Cut the sleeve using a sharp pair of shears.

STEP 8. Fold the loose ends in and secure with supplied stainless tie.

STEP 9. Break-in: It is common for the exhaust sleeve to smoke for a few heat cycles, this is normal.