



## INSTALLATION INSTRUCTIONS

### Jeep Side Window Kit

#### KIT CONTENTS:

#050149 - '11-'16 4-Door Black 2 Pieces  
#050150 - '11-'16 4-Door Gray 2 Pieces  
#050151 - '11-'16 4-Door White 2 Pieces  
#050152 - '11-'16 2-Door Black 2 Pieces  
#050153 - '11-'16 2-Door Gray 2 Pieces  
#050154 - '11-'16 2-Door White 2 Pieces  
#050163 - '11-'16 4-Door Black 2 Pieces  
#050164 - '11-'16 4-Door Gray 2 Pieces  
#050165 - '11-'16 2-Door Black 2 Pieces  
#050166 - '11-'16 2-Door Gray 2 Pieces


#### TOOLS:

Use manufacturer's suggested tools for hardtop removal.

**NOTES:** This kit is designed to fit Jeep Wranglers equipped with factory hardtops. We suggest you remove the hardtop from vehicle and place on the floor in an inverted position. Placing the hardtop on a blanket is recommended to protect it from scratches. Test fit the parts in place with the paper release liner left in place to note its position and where it will be installed. Once the adhesive contacts a clean surface, it is extremely difficult to remove the adhesive. Be sure the part is in the desired position before adhering it!

#### SURFACE PREP:

Vacuum or wipe down installation area to remove all loose debris/dust. Then clean with isopropyl alcohol to remove any contaminants.

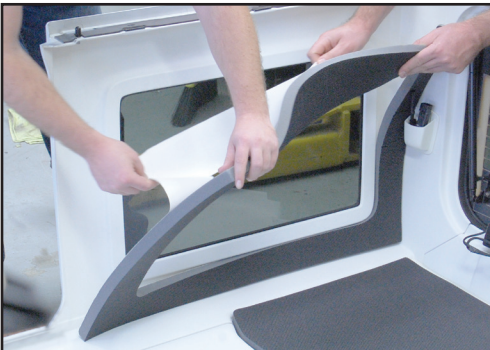

1.) Remove the hardtop from vehicle following the manufacturer's suggested removal procedure. Placing the hardtop on a blanket is recommended to protect it from scratches. Make sure to place the hardtop on the blanket in an inverted position.



2.) Test fit to determine the correct placement for each side.



3.) Peel paper backing slowly and press fit piece as you pull backing off.

4.) Firmly press piece in place after entire backing is removed to ensure a tight bond on entire piece.

5.) Reinstall the hardtop according to the manufacturer's suggested installation procedure.