

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 500406
1967-1969 Camaro/Firebird trunk divider insulation kit

KIT CONTENTS:
Pre-cut D-Mat insulation panel
Boom mat damping material
• Instructions

TOOLS NEEDED:
Scissors

SAFETY:
Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

OVERVIEW: This kit controls heat and sound on the trunk divider of 67-69 Camaro and Firebird

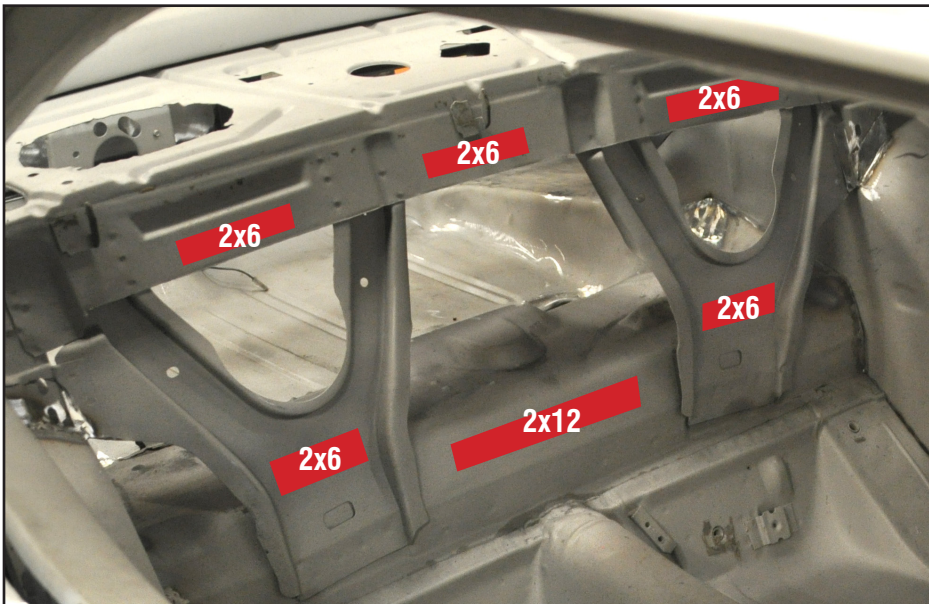


Fig 1

STEP 1. Remove back seat top and bottom.

STEP 2. Clean all the surfaces. They must be free from dirt, grease or other material that would prevent the Boom Mat from sticking.

STEP 3. See **Fig 1** for placement of the Boom mat material. (Locations marked in red) When installing the Boom Mat make sure to firmly press into place. It must have full contact to perform correctly.

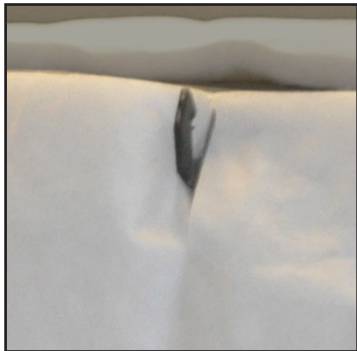


Fig 2

STEP 4. Place divider insulation panel over the hooks for the back seat upper cushion.

Fig 2 The insulation will hang in place and be held in tightly by the back seat.



STEP 5. Some trimming may be needed as different cars and model years may have slight variations to the pattern.

STEP 6. Once install replace the lower and upper back seat cushions.

