

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 500408
1967-1969 Gen 1 Camaro/Firebird roof insulation kit

KIT CONTENTS:
1 can spray adhesive
6 precut D-mat insulation panels
4 - 6"x6" squares of Boom mat.
• Instructions

TOOLS NEEDED:
Scissors

SAFETY:
Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

OVERVIEW: This kit controls heat and sound in roof panels of 67-69 Camaro and Firebird

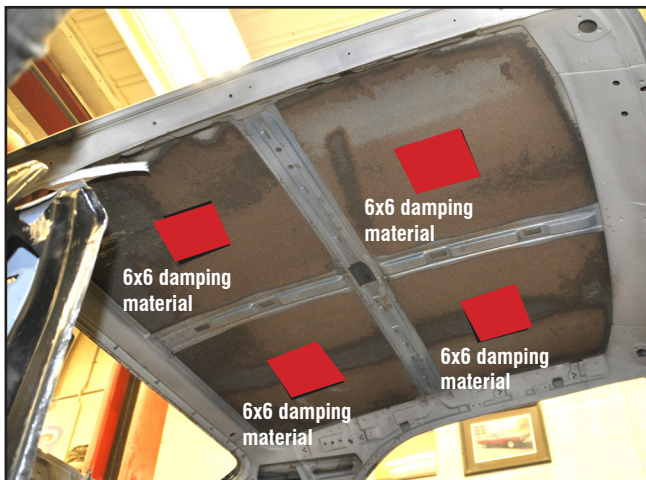


Fig 1

STEP 1. Remove factory headliner and any material adhered to the roof.

STEP 2. Clean roof area; remove any dirt, grease or material from metal. Both the boom mat and adhesive need a clean dry surface to adhere to.

STEP 3. Apply one 6" x 6" square of Boom Mat damping material in the center of each panel. (Market in red) **FIG 2**

Be sure to press down to make sure you have complete contact of the Boom mat to the roof surface.



Fig 2

STEP 4. Match each pre-cut D-mat panel to the shape of the roof and the rear side pillars. Pre-fit the insulation to make sure you have a good fit. Some minor trimming may be necessary. Every car is slightly different so some trimming may be needed.

STEP 5. Apply the spray adhesive per the instructions on the can. You must spray both the insulation and the roof area where it will be applied. Allow to dry before placing insulation in place. Apply adhesive on fiber side of D-Mat

Fig 2



Fig 3

STEP 6. Once dry you can install the insulation and press firmly in place. **Fig 3**

STEP 7. Repeat for all the other panels



Fig 3

STEP 8. You can now install your headliner.