

## INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

**DESCRIPTION:** 51412

1967-1969 Camaro/Firebird firewall insulation kit

**KIT CONTENTS:**

Pre-Cut D-mat insulation (1 panels)  
Boom Mat 2" x 6" x 6 pieces  
• Instructions

**TOOLS NEEDED:**

Scissors

**SAFETY:**

Safety glasses  
Gloves

**NOTE OF CAUTION:** Wear eye and hand protection when installing all materials.

**OVERVIEW:** This kit controls heat and sound on the firewall of 67-69 Camaros and Firebirds

STEP 1. Remove carpet and old damping material


STEP 2. Clean area, must be free from dirt and grease

STEP 3. Apply Boom Mat 2" x 6" damping material strips to firewall, spread strips out over the width of the firewall. Exact location is not critical. Firmly press into place

STEP 4. Test fit D-Mat insulation for fitment. Slight trimming may be needed

STEP 5. Follow instruction on the provided adhesive and attach D-Mat insulation

STEP 6. Reinstall carpet

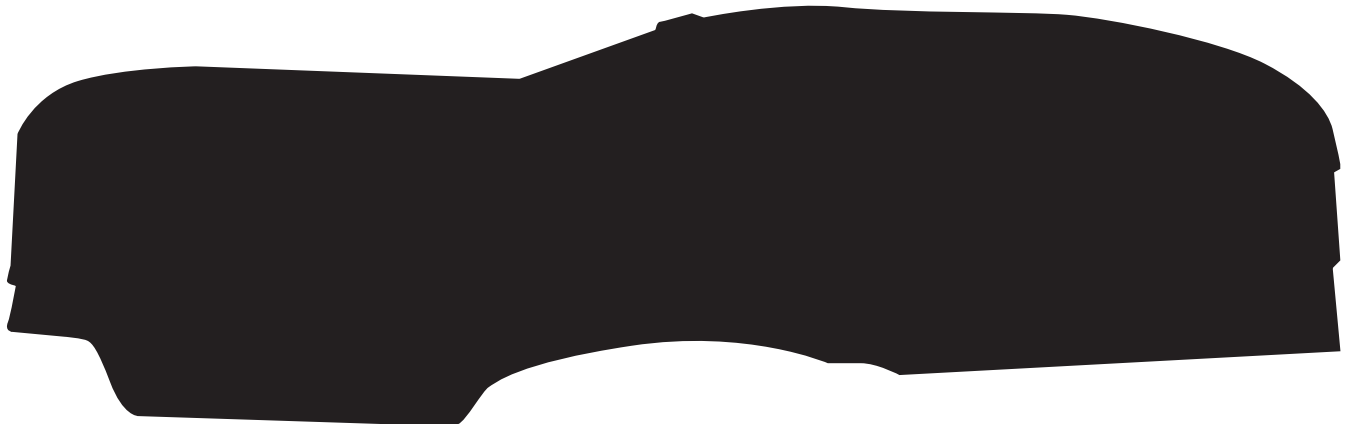

**Fig 1**