

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 2007- 2018 170" WB

Complete Kit les windows & floor

KIT CONTENTS:

3D-Mat 30mm Wall Insulation

TOOLS NEEDED:

Cleaner & Degreaser

Rags/Towels

Tools for interior panel removal

Adhesive Spray for overhead sections (#050490)

SAFETY:

Safety glasses

Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Use cleaners or degreasers in a well ventilated area


DRIVER SIDE WALL

PLACEMENT OF INSULATION

← REAR OF VEHICLE

FRONT OF VEHICLE →

Pieces 905, 891 & 907 are
inserted inside structural rib

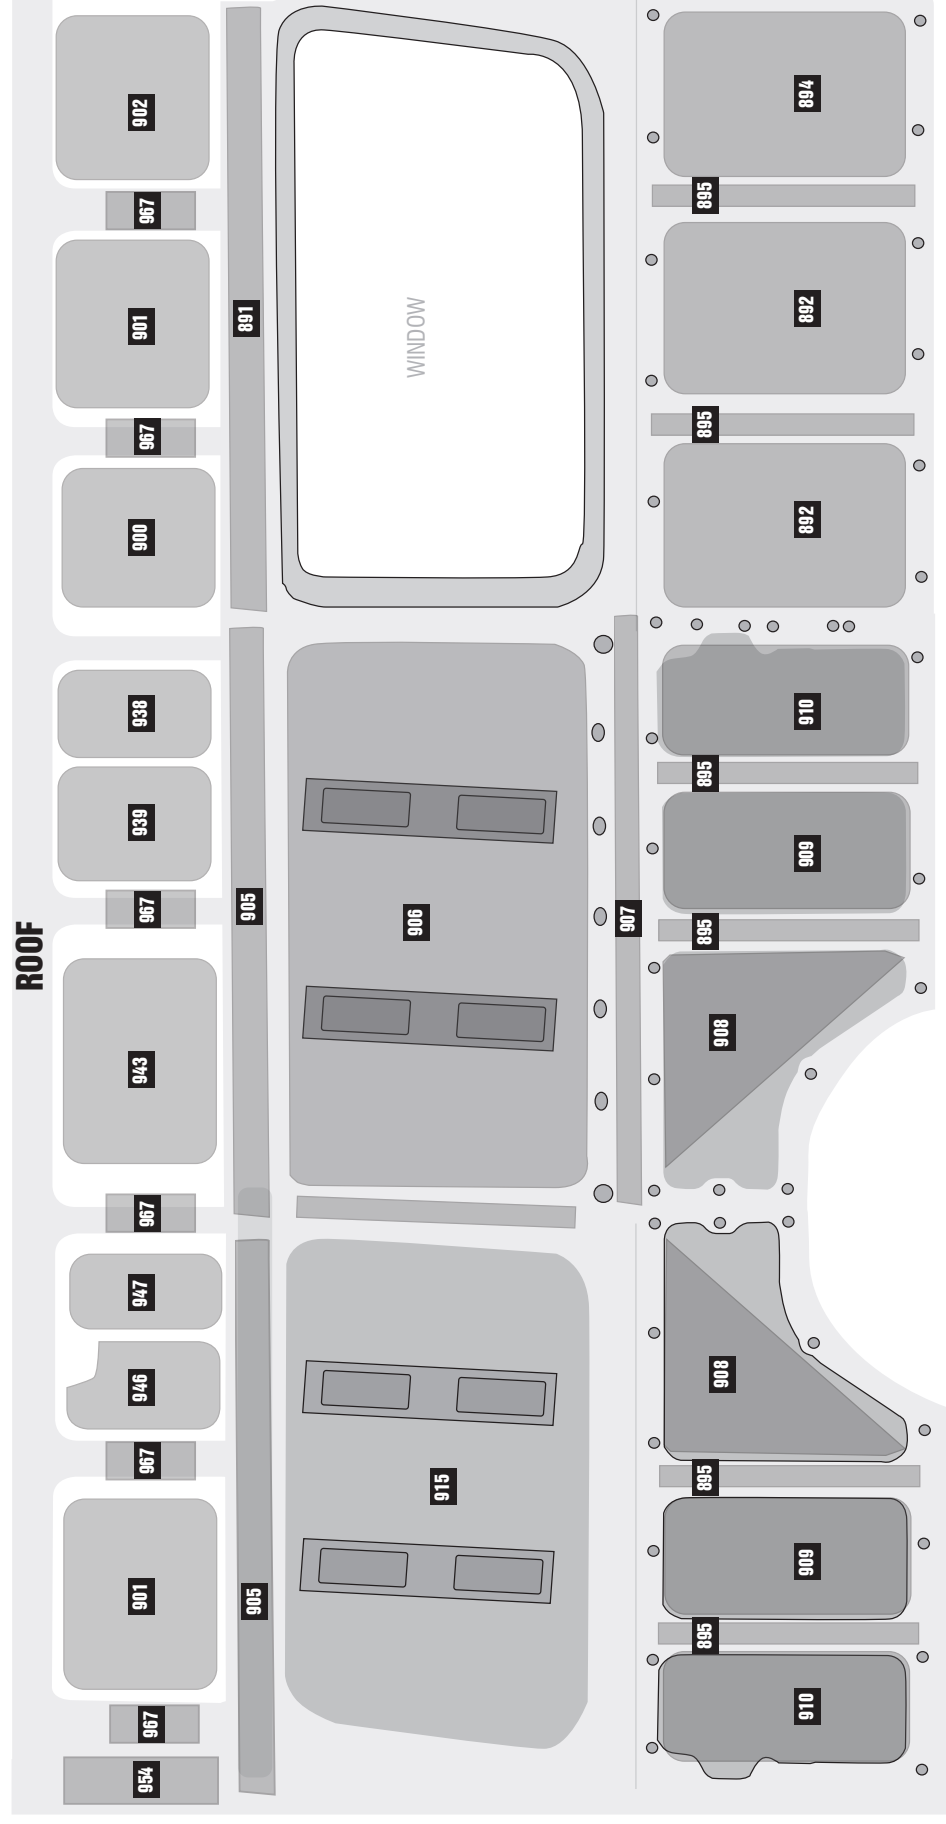

FLOOR

PASSENGER SIDE WALL


PLACEMENT OF INSULATION

← **FRONT OF VEHICLE**

REAR OF VEHICLE →

Pieces 905 & 907 are
inserted inside structural rib

Pieces 925 goes in door with door equipped vehicles

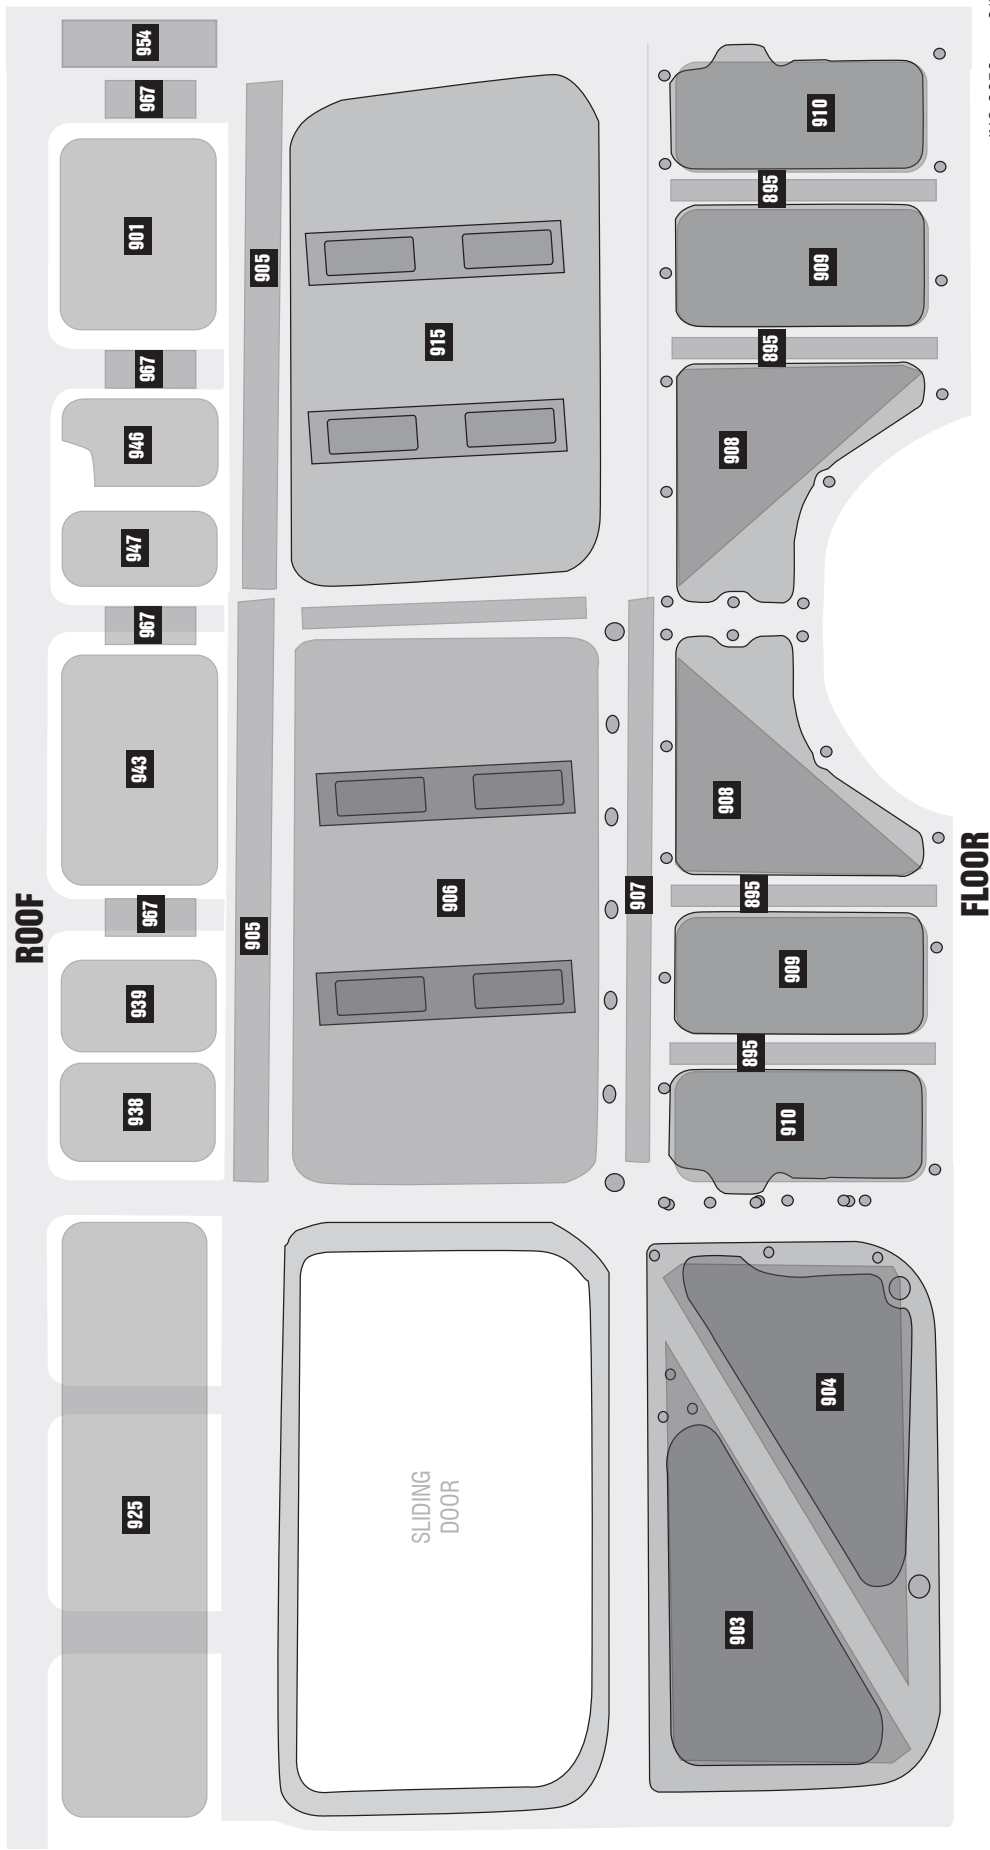

ROOF


PLACEMENT OF INSULATION

← REAR OF VEHICLE

FRONT OF VEHICLE →

Pieces 966 are inserted inside structural rib

PASSENGER SIDE

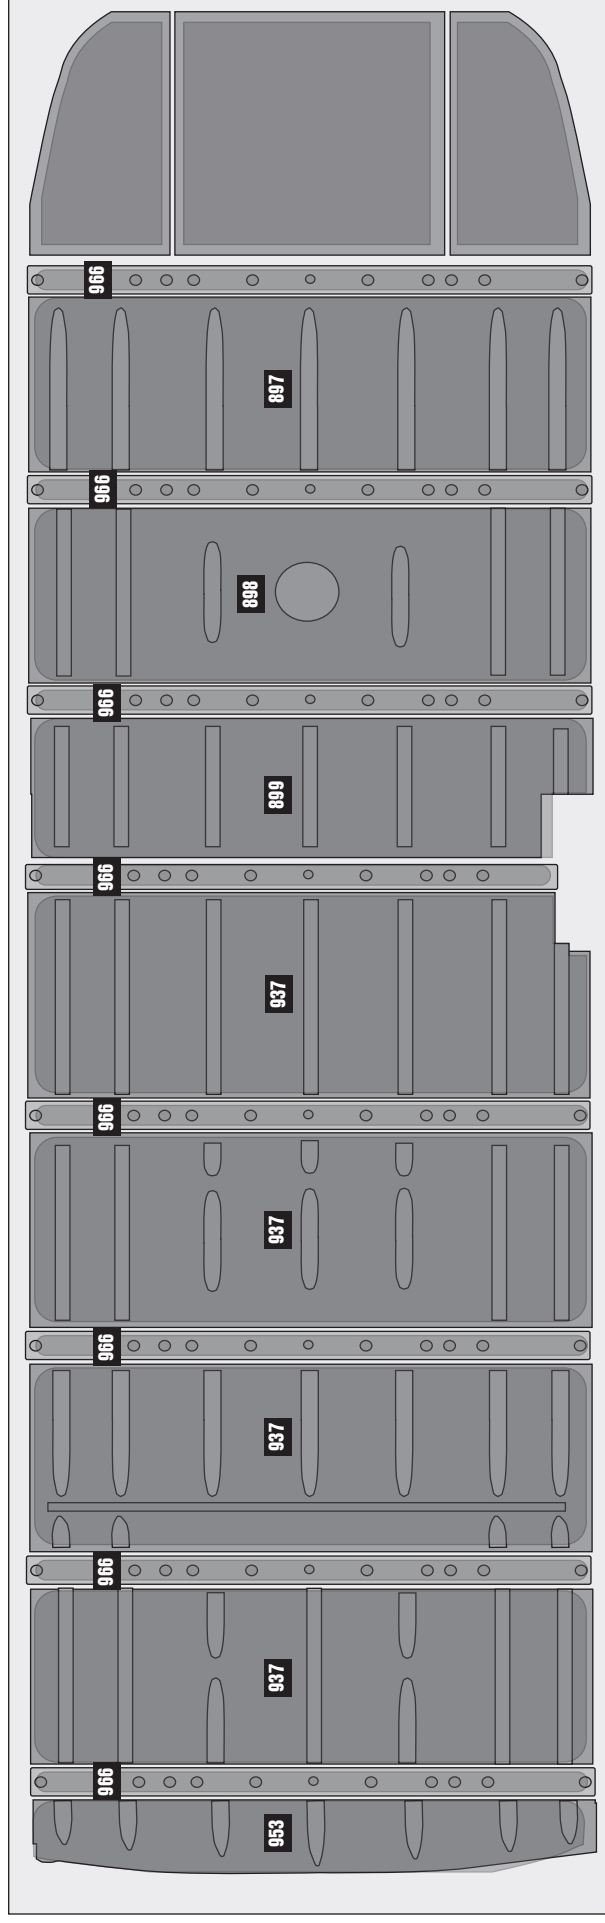


DRIVER SIDE

REAR DOORS

PLACEMENT OF INSULATION

PASSENGER SIDE
AS VIEWED FROM
INSIDE VAN WITH
DOORS CLOSED

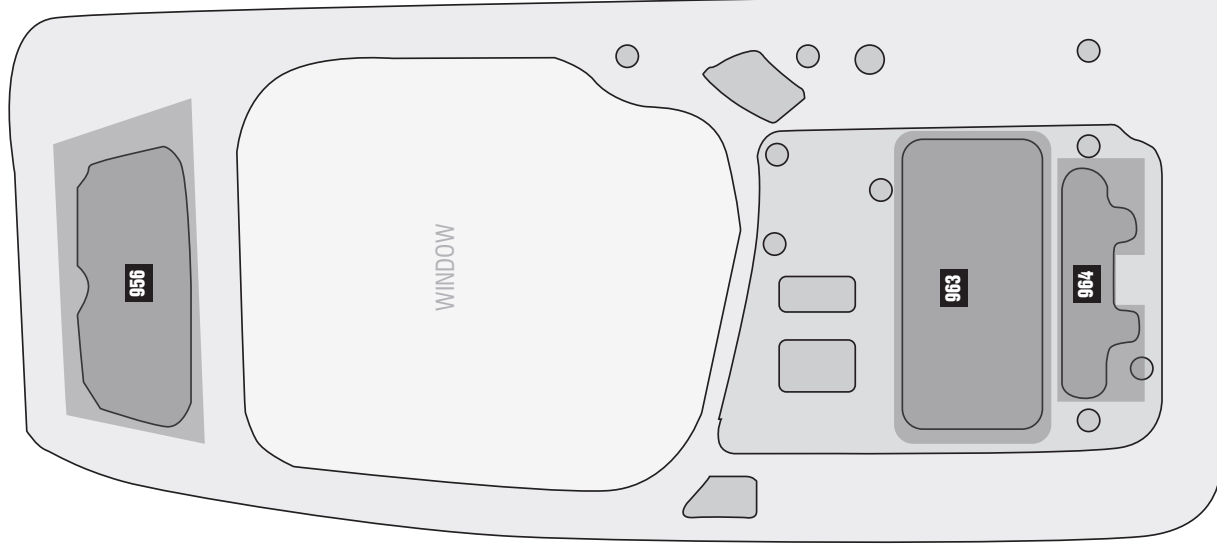

DRIVER SIDE
AS VIEWED FROM
INSIDE VAN WITH
DOORS CLOSED

