

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 2007-2018 Sprinter Van 144"WB
Complete Insulation Kit

KIT CONTENTS:
3D-Mat 30mm Wall Insulation

TOOLS NEEDED:

Cleaner & Degreaser
Rags/Towels
Tools for interior panel removal
Adhesive Spray for overhead sections (#050490)

SAFETY:

Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Use cleaners or degreasers in a well ventilated area


DRIVER SIDE WALL

PLACEMENT OF INSULATION

← REAR OF VEHICLE

FRONT OF VEHICLE →

Pieces 921, 923 & 891 are inserted inside structural rib

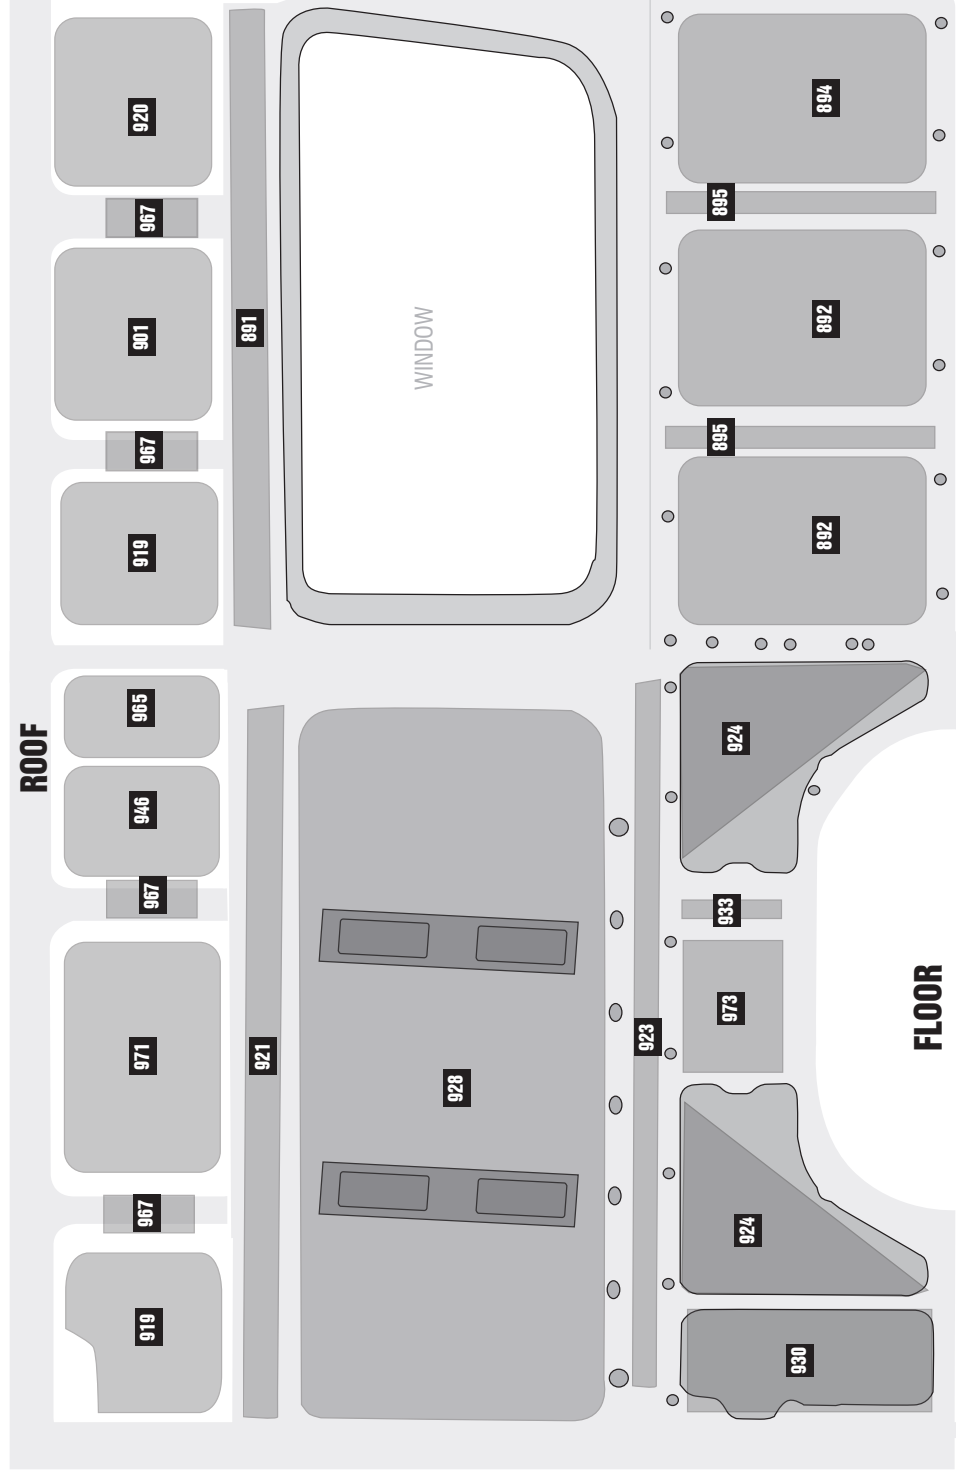

PASSENGER SIDE WALL


PLACEMENT OF INSULATION

← **FRONT OF VEHICLE**

REAR OF VEHICLE →

Pieces 921 & 923 are inserted inside structural rib

Pieces 925 goes in door with door equipped vehicles

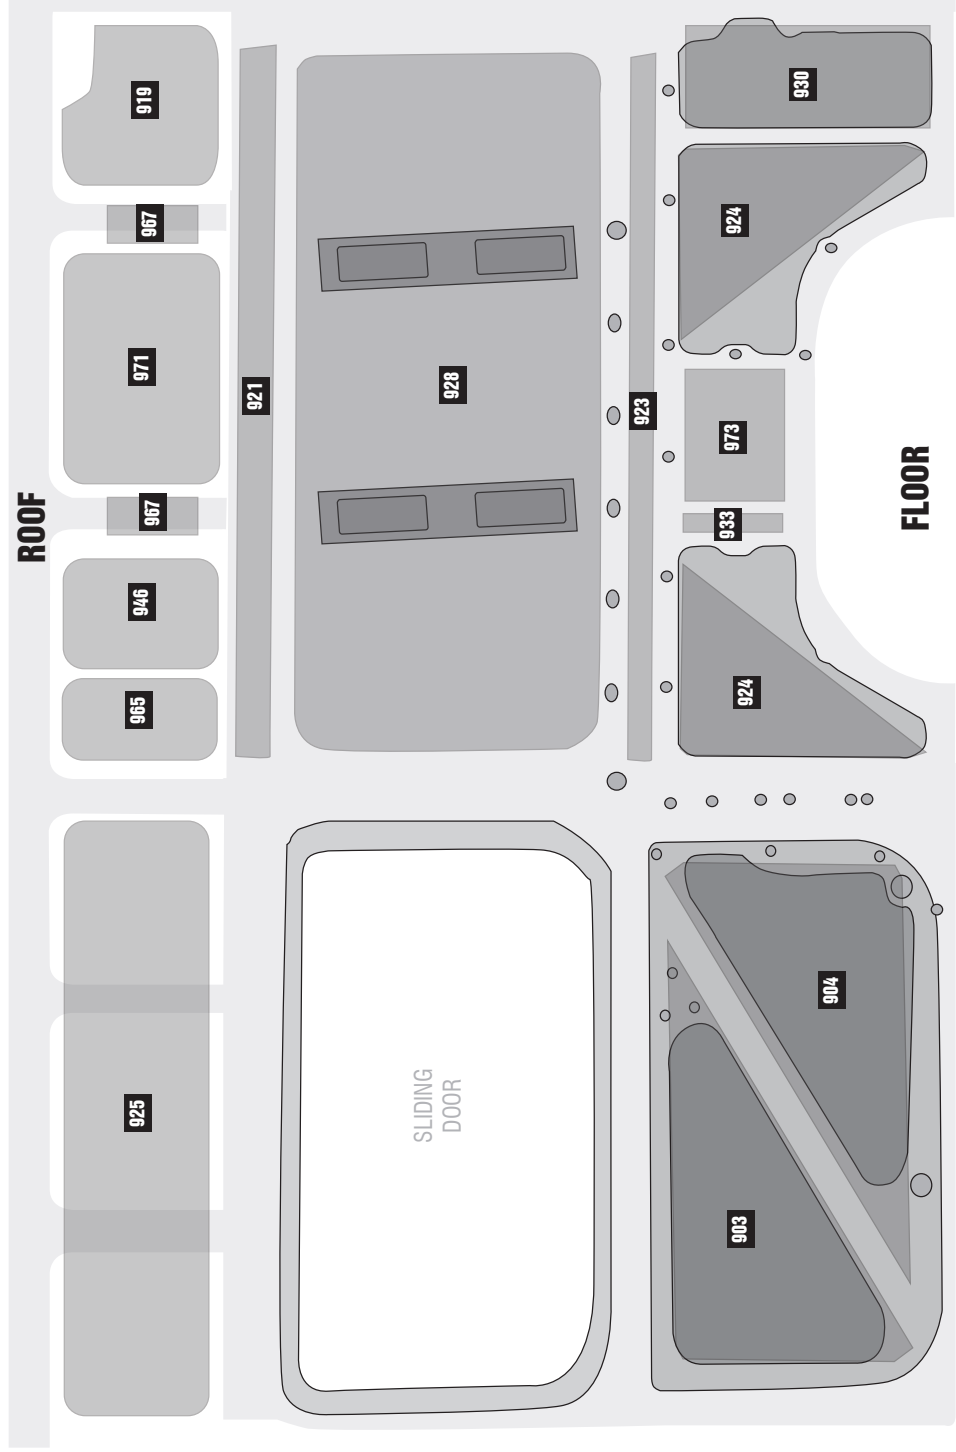


ROOF PLACEMENT OF INSULATION

← REAR OF VEHICLE

FRONT OF VEHICLE →

Pieces 966 are inserted inside structural rib


PASSENGER SIDE

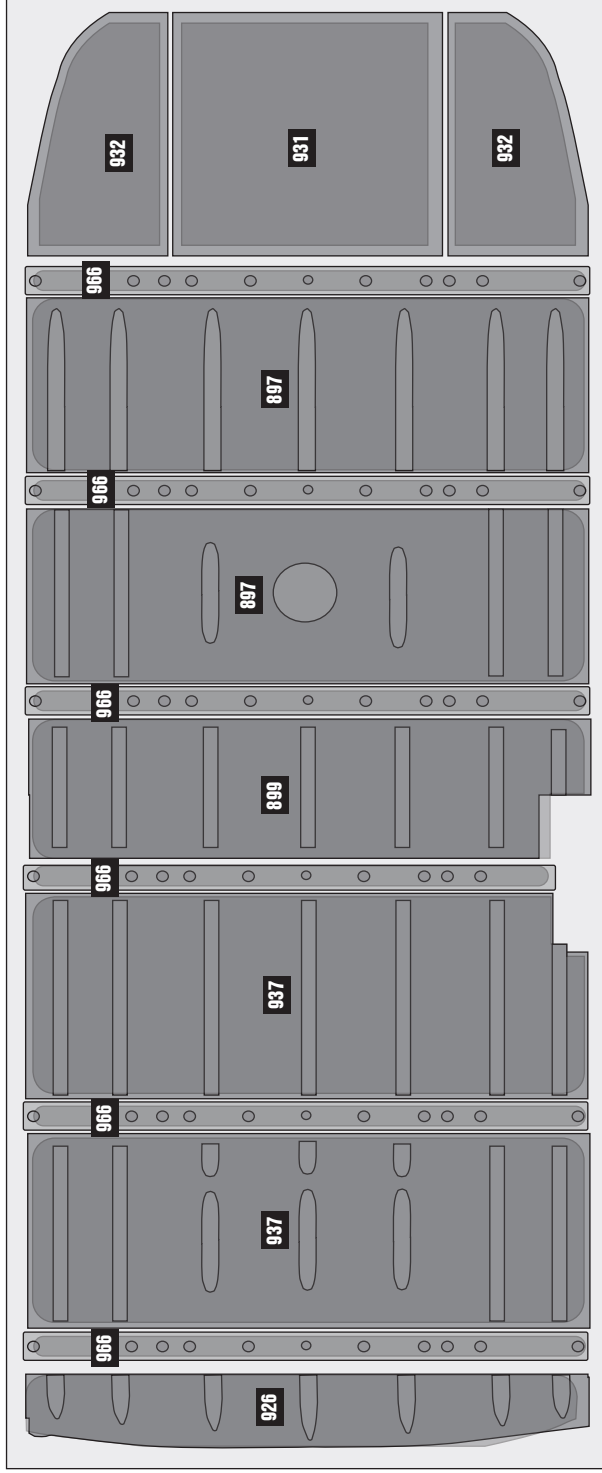


DRIVER SIDE

REAR DOORS

PLACEMENT OF INSULATION

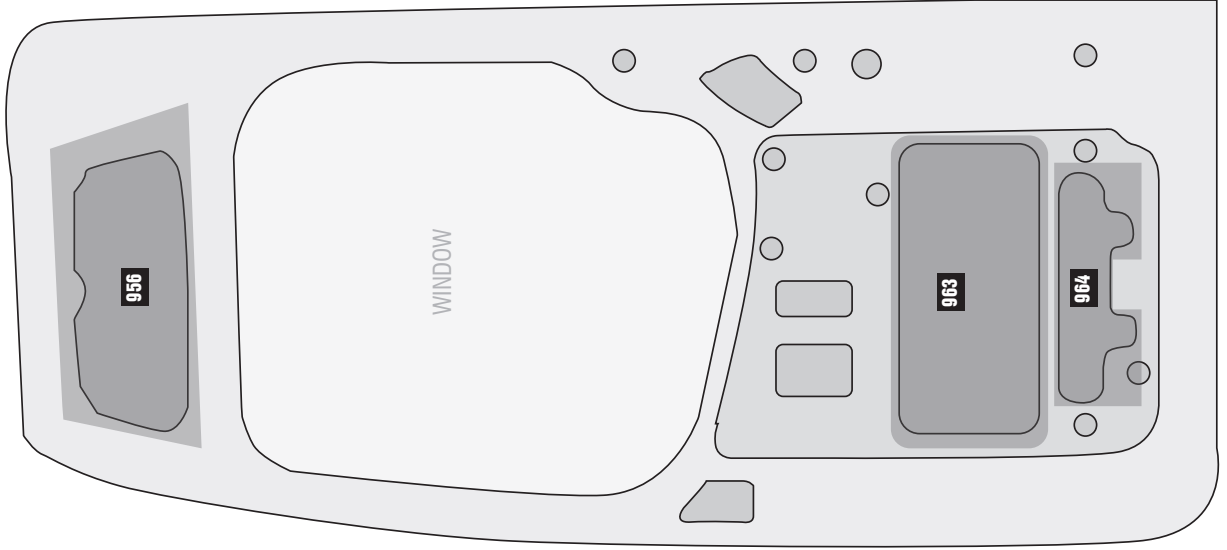

PASSENGER SIDE
AS VIEWED FROM
INSIDE VAN WITH
DOORS CLOSED

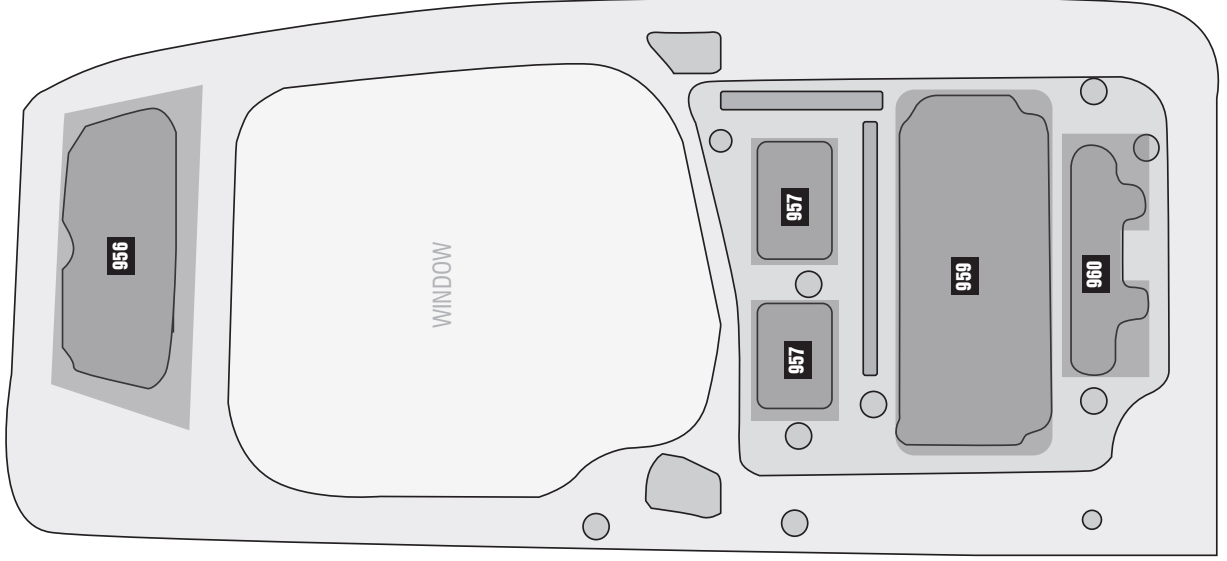

DRIVER SIDE
AS VIEWED FROM
INSIDE VAN WITH
DOORS CLOSED