

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 2007-2018 170" EXT WB
Damping Kit Less Floor

KIT CONTENTS:
Pre-Cut Damping Material

TOOLS NEEDED:

Cleaner & Degreaser
Rags/Towels
Tools for interior panel removal

SAFETY:

Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Use cleaners or degreasers in a well ventilated area

NOTE OF CAUTION: Edges of damping material can be sharp. PLEASE wear hand protection and use caution when installing damping material.


ROOF PLACEMENT OF DAMPING MATERIAL

STEP 1: Clean surfaces to make sure they are free of dirt, grease or contaminants. Peel the release liner off of damping material and press firmly in place by hand. (**Be careful! as the edges of the damping material can be sharp) Then take roller and roll material to ensure good adhesion.

← REAR OF VEHICLE

FRONT OF VEHICLE →


PASSENGER SIDE

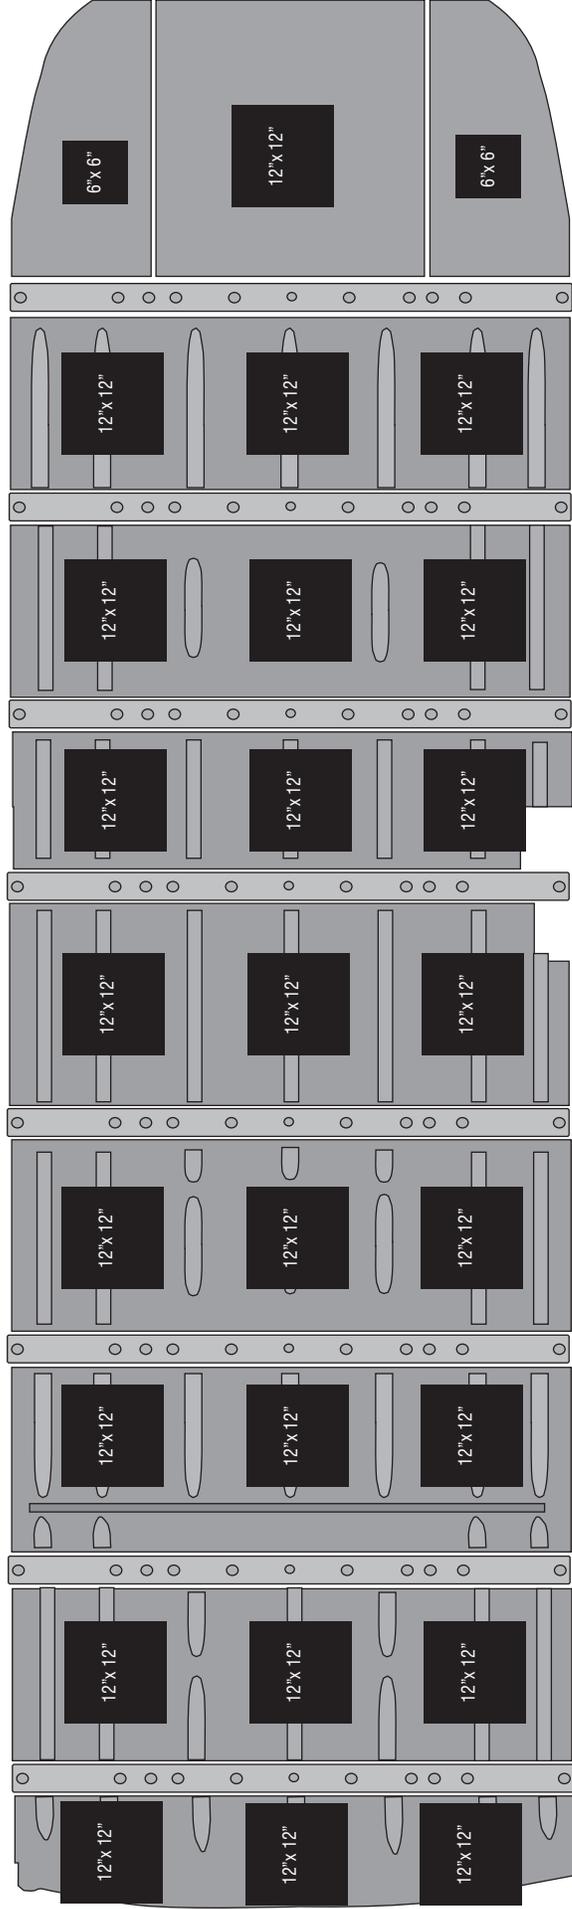


REAR DOORS

PLACEMENT OF DAMPING MATERIAL

STEP 1: Clean surfaces to make sure they are free of dirt, grease or contaminants. Peel the release liner off of damping material and press firmly in place by hand. (**Be carefull as the edges of the damping material can be sharp) Then take roller and roll material to ensure good adhesion.

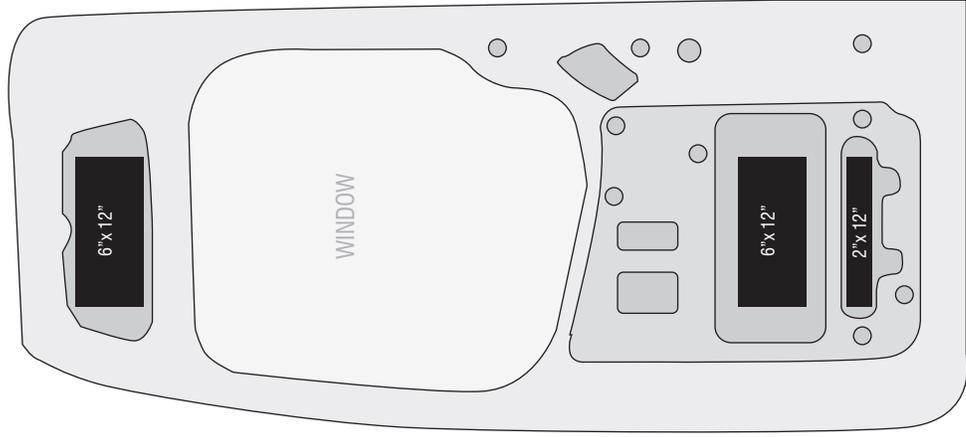

PASSENGER SIDE

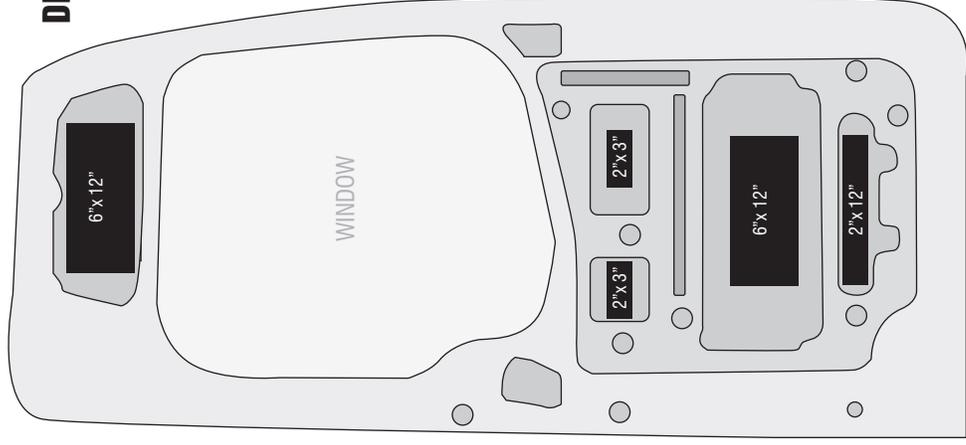

DRIVER SIDE