

## INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

**DESCRIPTION:** 2007 - UP 144" WB  
Floor Damping Kit

**KIT CONTENTS:**  
Pre-Cut Damping Material

**TOOLS NEEDED:**

Cleaner & Degreaser  
Rags/Towels  
Tools for interior panel removal

**SAFETY:**

Safety glasses  
Gloves

**NOTE OF CAUTION:** Wear eye and hand protection when installing all materials. Use cleaners or degreasers in a well ventilated area

**NOTE OF CAUTION:** Edges of damping material can be sharp. PLEASE wear hand protection and use caution when installing damping material.


# FLOOR

## PLACEMENT OF DAMPING MATERIAL

STEP 1: Clean surfaces to make sure they are free of dirt, grease or contaminants. Peel the release liner off of damping material and press firmly in place by hand. (\*\*Be careful as the edges of the damping material can be sharp) Then take roller and roll material to ensure good adhesion.

← FRONT OF VEHICLE

REAR OF VEHICLE →

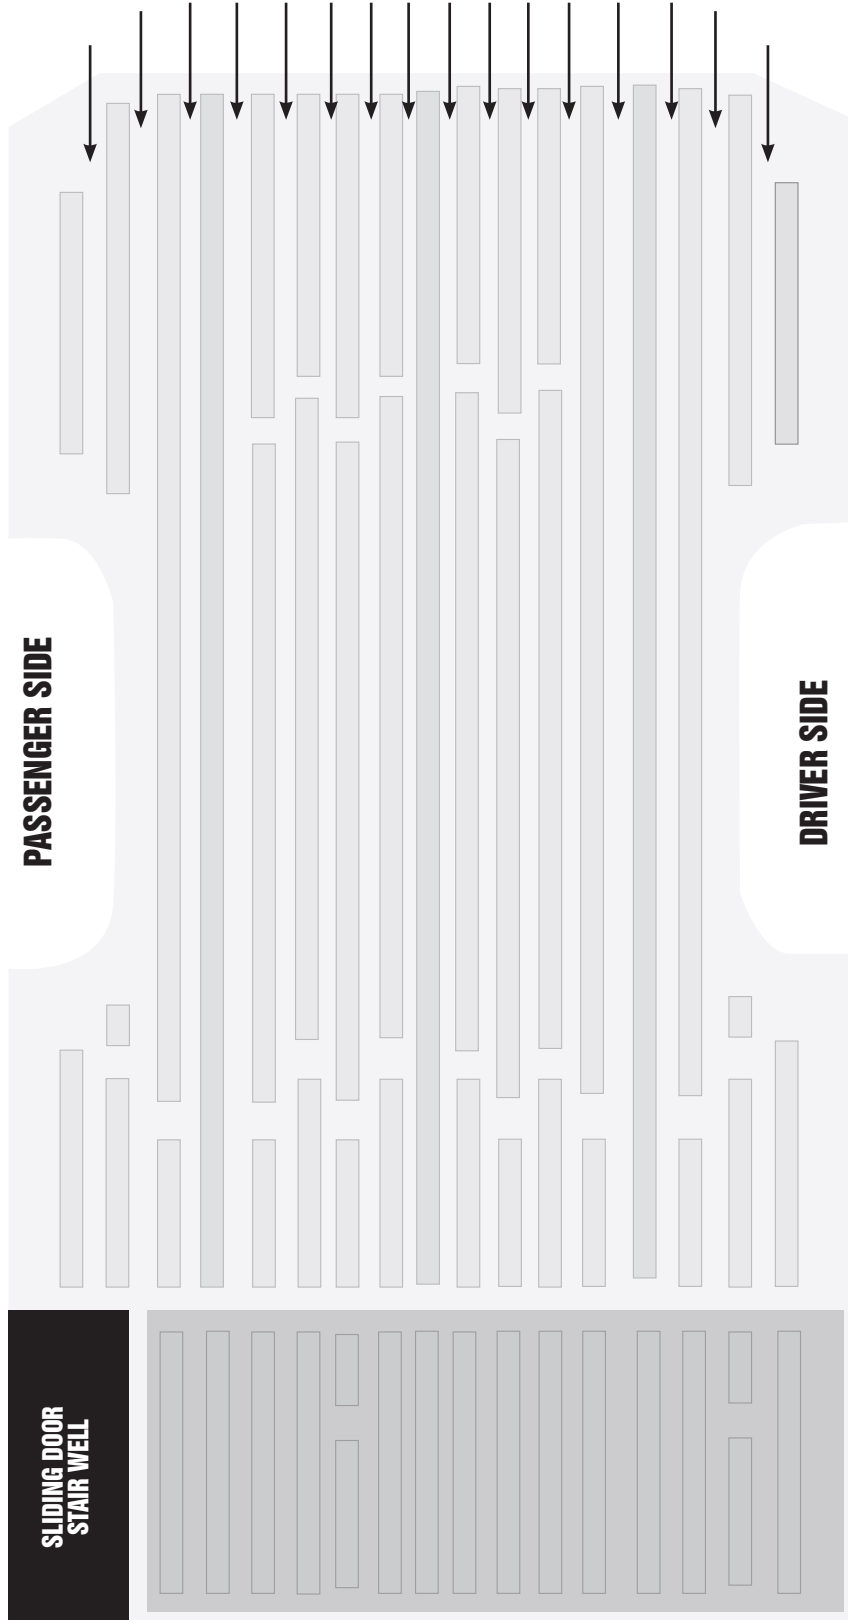

**CUT 1.5"  
WIDE DAMPING  
TAPE TO LENGTH  
AND PRESS  
IN PLACE  
BETWEEN  
RAISED RIBS  
IN FLOOR**