



INNOVATIVE
**HEAT & SOUND
CONTROL**
SOLUTIONS

INSTALLATION INSTRUCTIONS

PART #50231, 50232, 50233
BOOM MAT ACOUSTIC

**INSTALLATION QUESTIONS? CONTACT DEI AT 800-264-9472
OR VIA EMAIL AT TECH@DESIGNENGINEERING.COM**

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

PARTS CHECKLIST

Boom Mat Acoustic Material
Instruction Sheet

NOTES

All surfaces must be clean and grease/oil free before installation

SURFACE PREP

Vacuum installation area to remove all loose debris. Then clean with isopropyl alcohol, soapy water, or a wax/grease remover. Allow sufficient time to dry before installation of Boom Mat products.

TOOLS

Ruler/straight edge, utility knife, marker

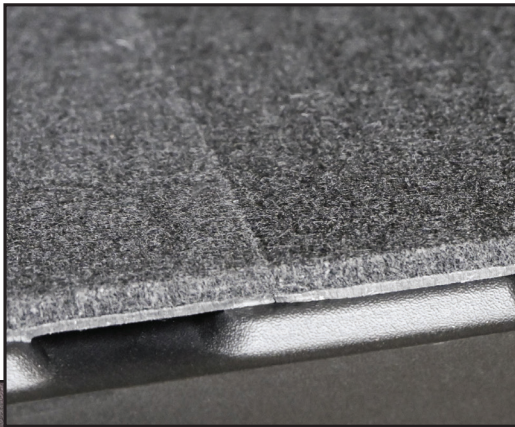


FIG 1

1. Trim the Boom Mat Acoustic Material to desired shape and size with your Boom Mat blade lock knife or scissors. A template is helpful when trying to achieve a professional look.

2. To make a good seam between two sheets, use the factory edge. Fig 1

3. If cutting the edges, use a straight edge when making the cut. You need a clean cut edge to minimize the look of the seam.

4. Adhere one panel first, then taking the second panel, peel a small portion of the edge of the release liner back. Position the panel in place making sure to push the two edges tight together, then firmly push down the area where the liner has been pulled back. Peel the rest of the liner away and push it to adhere. Fig 2

5. Once in the proper location, use your Boom Mat installation roller (50218) and apply pressure to ensure a strong bond between Boom Mat and the installation surface.



FIG 2