



INNOVATIVE
**HEAT & SOUND
CONTROL**
SOLUTIONS

INSTALLATION INSTRUCTIONS

**PART #902417
ROOF INSULATION KIT
2024 & UP POLARIS XPEdition
ADV NORTHSTAR 2-DOOR ENCLOSED XP5**

**INSTALLATION QUESTIONS? CONTACT DEI AT 800-264-9472
OR VIA EMAIL AT TECH@DESIGNENGINEERING.COM**

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

PARTS CHECKLIST

Piece # 557 - Roof Insulation
Piece # 559 - Roof Insulation

NOTES

- Test fit all parts
- See factory manual for detailed instructions for removing roof panels

SURFACE PREP

Clean surfaces with Windex/glass cleaner/microfiber towels.

TOOLS

Torx Screw Driver



1. Remove the front headliner. It is held in place with Torx screws. Fig 1.



FIG 1

2. You will have to remove the dome light, push the locking clip on the wire plug to remove.
Fig 2 & Fig 3.

3. Remove rear view mirror. The mirror uses two Allen screws. Fig 4 Fig 5.



FIG 2



FIG 3



FIG 4



FIG 5

4. Once all the screws are removed, you can pull the headliner down and set on a table.
Fig 6

5. Install the White insulation (Piece 557) fuzzy side down against the headliner, and reinstall the headliner.
Fig 7 & Fig 8



FIG 6



FIG 7

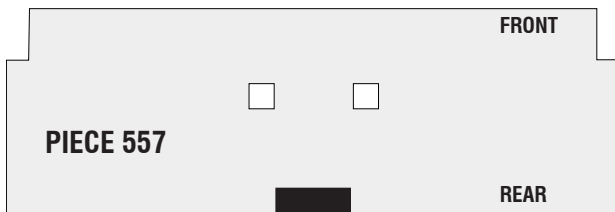


FIG 8

6. Remove the middle headliner. It is held in place with Torx screws. Once all the screws are removed, you can pull the headliner down and set on a table. Fig 9

7. Install the headliner White insulation (Piece 559) fuzzy side down against the headliner, and reinstall the headliner. Fig 10 & Fig 11



FIG 9

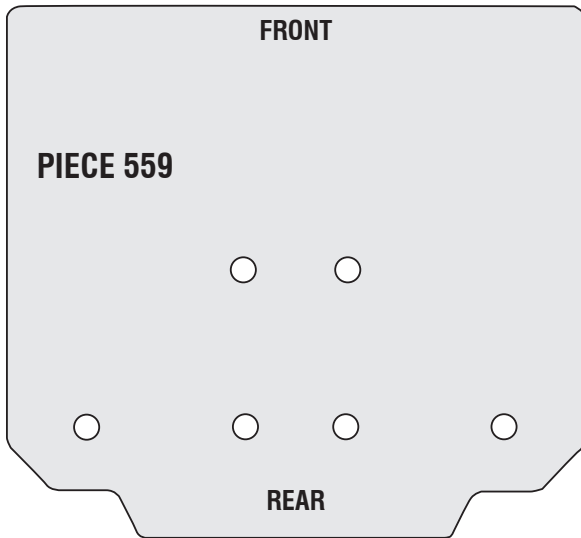


FIG 10



FIG 11